

BESTip ATA 10L Quick Start Manual (Ver.1.61C)

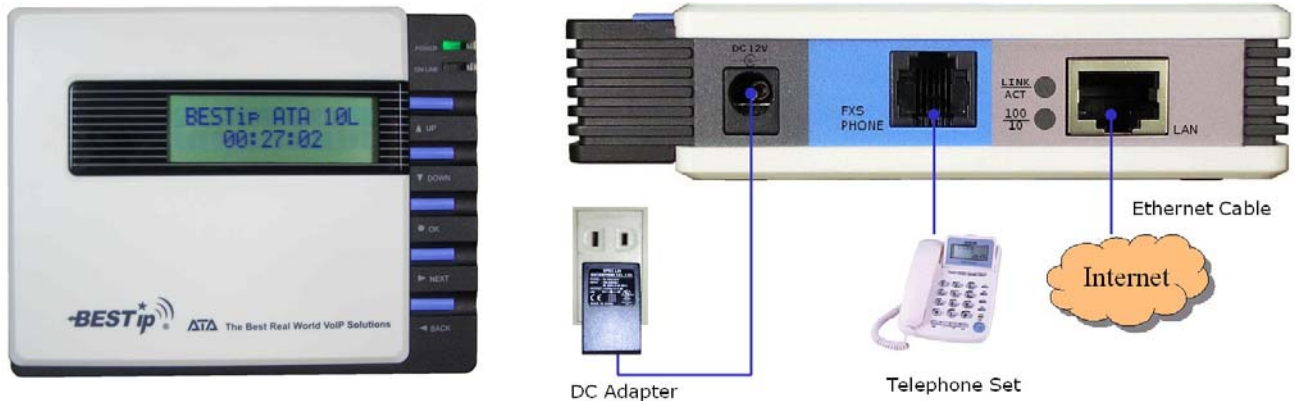
Requirements:

Before making any call from your BESTip ATA 10L, you need the following items:

1. A Touch-tone phone set.
2. A 110/220V AC electrical outlet.
3. A valid Internet connection.

Connection:

Please refer to the diagram below for the typical connection.

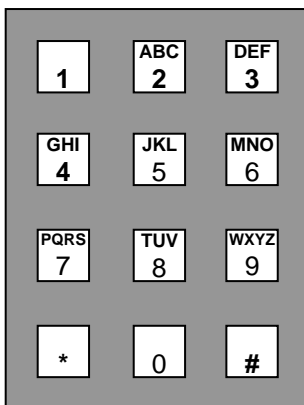


Buttons & Phone Keypad

Before making phone call, you must configure and connect ATA 10L properly. Please enter your Internet information with your touch-tone telephone keypad and BESTip's buttons.

Refer to the Typical Phone Keypad and Character Set below to enter characters.

Typical Phone Keypad and Character Set



KEY PAD	Character Set
1	1 - !#\$%&_+:"<>? \, /
2	2 abcABC
3	3 defDEF
4	4 ghiGHI
5	5 jklJKL
6	6 mnoMNO
7	7 pqrsPQRS
8	8 tuvTUV
9	9 wxyzWXYZ
0	0 .@ "space"
*	*
#	#

How to enter or change setting

 
 

 
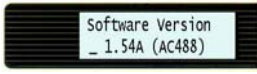

 


 
 

Use the buttons in the front panel for menu function navigation. Go to the option you want to setup. Then follow steps described below to enter or change the setting,

1. Press one time, the title will start flashing. You may enter new setting from phone keypad now.
2. Press button again. The title will stop flashing. The new value has been store in memory temporarily. You may go to the next setting.
3. After all the settings has been setup, please press one or two times until the screen displays "Update Setup". All the setting will be saved permanently.

 
 
Note: It is a good practice to restart the device if any setting had been changed.

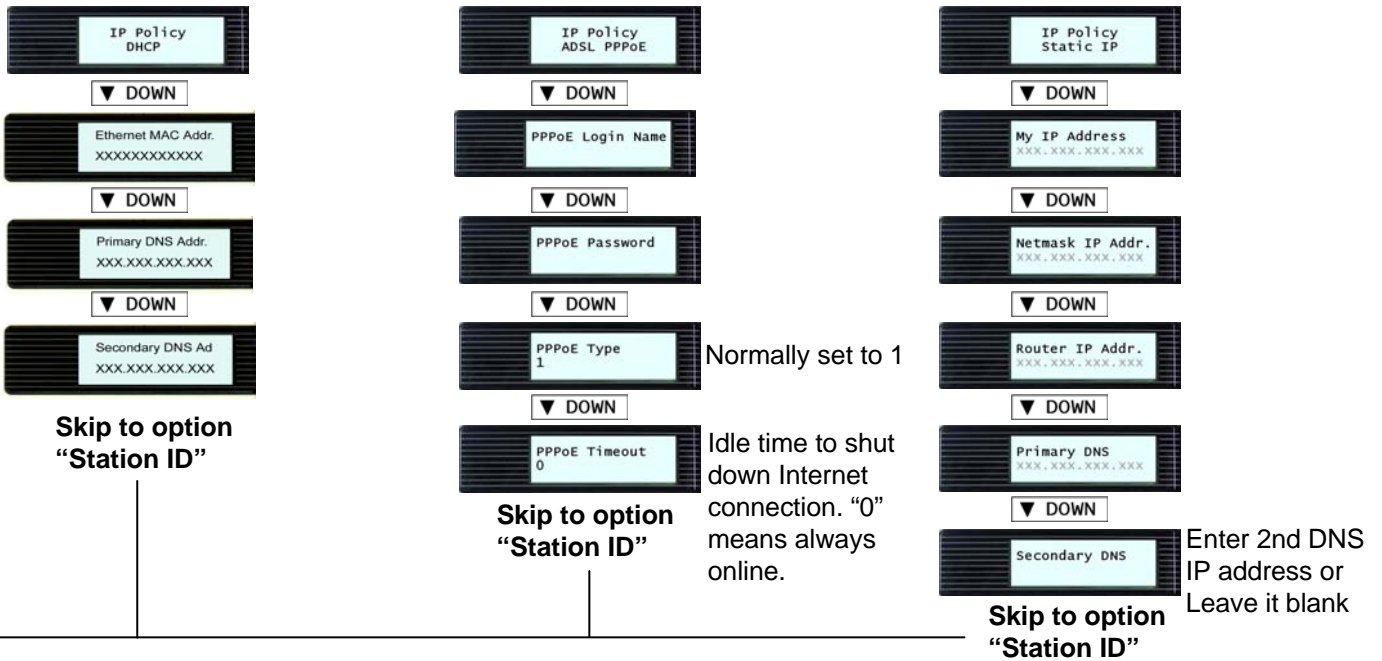


 


 
 
 
 
 
 
 
 
 
 



 
System Information

- 1 Press **▼ DOWN** button at standby state to enter **setup mode**.

- 2 Press **▶ NEXT** button until you see **System Info** option. Press **▼ DOWN** to enter **System Info** menu.

- 3 Press **▼ DOWN** to see **Device ID#** or you can see it on the back side of device.

- 4 Press **▼ DOWN** to see **ITSP Credit** in the device.

- 5 Press **▼ DOWN** to see **Software Version** of the device.

- 6 Press **▼ DOWN** to see **LAN MAC Address** of the device.

- 7 Press **▼ DOWN** to see **IP Address**.

- 8 Press **▼ DOWN** to see **Netmask IP Address**.

- 9 Press **▼ DOWN** to see **Router IP Address**.

- 10 Press **▼ DOWN** to see **Primary DNS**.

- 11 Press **▼ DOWN** to see **Secondary DNS**.

- 12 Press **▼ DOWN** to see **Gatekeeper Type** the device registered.


Setup Quick Configuration

 

 
 
 

- Press **▼ DOWN** button at standby state to enter **setup mode**. 
- Press **▶ NEXT** button until you see **System Setting** option. Press **▼ DOWN** to enter **System Setting** menu. 
- Subject to your broadband environment there are three options up to your choice in **IP Policy: Static IP, DHCP, and ADSL PPPoE**. Please make sure the one you choose meet your requirement. Press **▶ NEXT** or **◀ BACK** to navigate between these three options, Press **▼ DOWN** to make your choice.



 
 


- Enter **Station ID**. Normally set to 1 
- Press **▼ DOWN** to enter **Country Code**. Enter your telephone country code 
- Press **▼ DOWN** to enter **IDD Prefix**. It is used for dialing international call. "00" in most cases 
- Press **▼ DOWN** button to enter **DDD Prefix**. It is used for dialing domestic and local call. "0" in most cases 
- Press **▼ DOWN** button to enter **Play Volume**. It is used for adjusting sound loudness from phone set ear piece. The range is ± 30 dB 
- Press **▼ DOWN** button to enter **Show CDR**. 
- Press **▼ DOWN** button to enter **LCD Contrast**. The range is from +5~-10. 
- You may skip the rest of options. Press **▲ UP** to return to top of **System Setting** menu. 
- It will return to standby state again after updated. Please restart the device to make setup changes effective. 
- Press **▼ DOWN** to enter **Gatekeeper**. **AUTO** is applicable most of the time. 
- Press **▼ DOWN** to enter **Area Code**. Enter local telephone domestic area code 
- Press **▼ DOWN** to enter **2nd IDD Prefix**. Leave it blank unless you are in USA. 
- Press **▼ DOWN** button to enter **Mobile Pincode**. Turn it on unless you have applied for business use 
- Press **▼ DOWN** button to enter **Record Volume**. It is used for adjusting sound loudness from phone set microphone. The range is ± 30 dB 
- Press **▼ DOWN** button to enter **Polarity Reverse**. 
- Press **▼ DOWN** button to enter **Hot Line**. Normally set to "OFF" 
- Press **▲ UP** button to save configuration data in memory 




 

 
 
 
Recharge Credit

- 1 Press then button at standby state to enter **Recharge Credit** menu. 
- 2 Press to start recharging credits for device. 
- 3 The device will connect to Internet automatically. Then **Enter Card #** will show. Press one time, the title will start flashing and enter the card #. Press button again. The title will stop flashing and save the card #. 
- 4 Press one time, the title will start flashing and enter the Pincode #. Press button again. The title will stop flashing. The new value will be stored temporarily. 
- 5 Press button to confirm. **Start Recharge** will shows. The process will take a few minutes. 
- 6 When recharge finished, the total amount will be shown on the display. 

Factory Setting

- 1  Press button at standby state to enter **setup mode**.
- 2  Press button until you see **Factory Setting** option. Press to enter **Clear System Setup** menu.
- 3  Press to enable **Clear System Setup**.
- 4  Press to confirm again.

System Upgrade

 
- 1 Press button at standby state to enter **setup mode**. 
- 2 Press button until you see **System upgrade** option. Press to enter **System Upgrade** menu. 
- 3 Press button to enter **Software upgrade** option. 
- 4 Press button and then button to upgrade software. 
- 5 The device will download and upgrade software automatically. 
- 6 After software upgrading finished, the device will restart automatically. 

Start Making VoIP Call

The device is ready to use in standby state when the blue **ON LINE** led on. You can pick up phone and dial Internet phone call now.



You may check up your credit by pressing at standby state. It will show balance left in your account. You can make phone call in this state, too.



Remark:

Each BESTip device is equipped with one unique device ID number, please find this number at bottom side of the device. Please dial the device ID number at the other side from your device to enjoy free Internet phone call. Each BESTip device is eligible to call international phone number if it has ITSP credit.

